

Netcomm V100 Configuration Instructions



Step 1: Connect your V100




1. Phone – plug in your analog telephone cord.
2. Ethernet Port - use an Ethernet cable to connect your V100 to your router or modem.
3. Power connection - Connect the power to your V100.
4. See your *Netcomm V100 User Manual* for more connection options.

Step 2: Install the V100 Software Utility.

1. If you have not already done so, install the V100 PC Tool utility on your PC. This would have come on a CD with your V100, and can also be downloaded from the Netcomm website:
<http://www.netcomm.com.au/Support/downloads.php?Category=VoIP&Products=V100>
2. Run the V100 PC Tools Application

Step 3: Configure the V100 ATA

1. You will need to know your Firefly Number and Password.
2. Click on the SIP tab, then select the Local tab from the below row. Set it up as follows (be sure to use your own Firefly Number and password!):

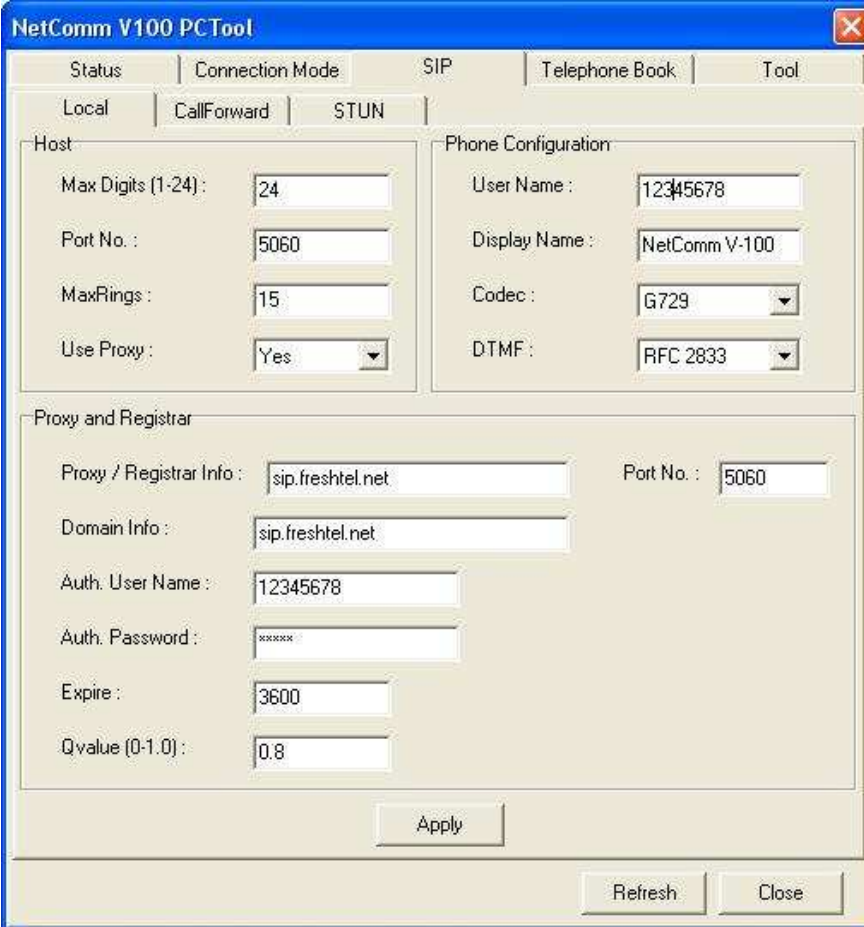

NetComm V100 PC Tool

Host

Max Digits (1-24) :

Port No. :

MaxRings :

Use Proxy :

Phone Configuration

User Name :

Display Name :

Codec :

DTMF :

Proxy and Registrar

Proxy / Registrar Info : Port No. :

Domain Info :

Auth. User Name :

Auth. Password :

Expire :

Qvalue (0-1.0) :

3. Click on the Apply button.
4. Click on the Close button.
5. Your Netcomm V100 is now configured and ready to use the Firefly Network. Simply pick up the phone and dial!

Dialling:

To dial a PSTN number, dial like you would with a normal phone. Eg 6139000000

To dial a Firefly number or voicemail, prefix a star to the number. Eg *80001234, *123